



14.1008 
KESSELTHERMOMETER
 Kunststoffgehäuse, -10...+110 °C
 360 MM, 70 G, LOSE, 5 SB

THERMOMETER FOR COOKING
 plastic frame, -10...+110 °C


THERMOMETRE POUR CHAUDRON
 boîtier plastique, -10...+110 °C




14.1009 
KESSELTHERMOMETER
 Drahtgehäuse, verzinkt, -10...+110 °C
 360 MM, 85 G, LOSE, 5 SB

THERMOMETER FOR COOKING
 wire frame, zincd, -10...+110 °C

THERMOMETRE POUR CHAUDRON
 boîtier de fil, zingué, -10...+110 °C

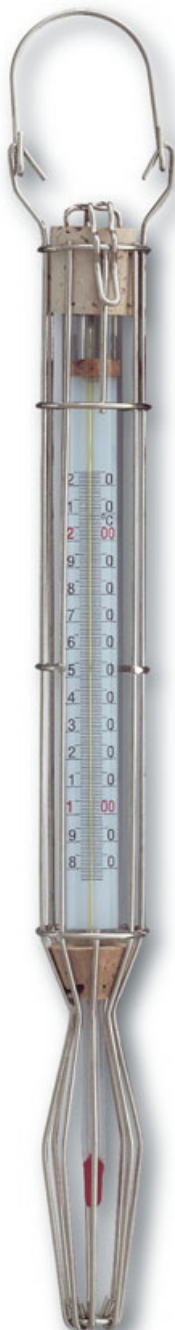

 **14.1007**
ZUCKERTHERMOMETER
 Drahtgehäuse, verzinkt,
 +80...+220 °C
 360 MM, 85 G, LOSE, 5 SB

SUGAR THERMOMETER
 wire frame, zincd,
 + 80...+220 °C


THERMOMETRE A SUCRE
 boîtier de fil, zingué,
 + 80...+220 °C

 **14.1020**
THERMOMETEREINSATZ
 für 14.1007
 240 MM, 25 G, LOSE

REPLACEMENT
 for 14.1007

RECHANGE
 pour 14.1007



14.1005 
THERMOMETEREINSATZ
 für 14.1009, -10...+110 °C
 240 MM, 25 G, LOSE

REPLACEMENT
 for 14.1009, -10...+110 °C

RECHANGE
 pour 14.1009, -10...+110 °C



 **14.1006**
BUTTER-QUARK-KÄSE-THERMOMETER
 -10...+110 °C
 240 MM, 25 G, LOSE, 10 SB

THERMOMETER
 FOR BUTTER, CURDS AND CHEESE
 -10...+110 °C

THERMOMETRE POUR BEURRE ET FROMAGE
 -10...+110 °C